

High Voltage Differential Probes

DP6000 Series

DP6070 700Vpk/ 70MHz

DP6150 1500Vpk/ 70MHz

DP6150A 1500Vpk/100MHz

DP6280 2800Vpk/100MHz

DP6700 7000Vpk/ 70MHz

DP6700A 7000Vpk/100MHz



ShenZhen ZhiYong Electronic Co.,Ltd

Introduction

First of all, thank you for purchasing our products, the product specification is about the function, usage, operation attention points, etc. Before use, please read the instructions carefully and used correctly. Please save it after reading.

Manual annotation will use the following symbols to distinguish.



This symbol means it has a harm to the machine and human body, you must refer to manual operation.

Warning

In the case of wrong operation, the user has the threat of injury, it records the relevant matters needing attention to avoid such dangers.

Noticee

The user may have suffered minor injuries and material damage while with the wrong operation, to avoid such situation, note the matters needing attention.

Note

Recording of important notes while using the machine.

For the safe use of the machine, you must abide by the following safety precautions strictly. If it is not in accordance with the manual, is likely to damage the protective function of the machine. In addition, the company is not responsible for the violation of personal safety arising from the matters needing attention in operation.



- Please be careful to get an electric shock, pay attention to the highest input voltage.
- Do not operate in wet/damp conditions.
- Make sure to close the circuit under test before access to the probe.
- Close the circuit after the measurement, then remove the probe.
- While BNC lines connect to the oscilloscope or other devices, ensure the BNC terminal grounding.
- Please check the probe skin if there is any breakage, stop using it if happen.
- Select the product standard adapter power supply.

DP6000 Series Brief Description

Modal	Maximum Input Differential Voltage	Bandwidth	Attenuation
DP6070	700V	70MHz	10X/100X
DP6150	1500V	70MHz	50X/500X
DP6150A	1500V	100MHz	50X/500X
DP6280	2800V	100MHz	100X/1000X
DP6700	7000V	70MHz	100X/1000X
DP6700A	7000V	100MHz	100X/1000X

Contents

Introduction.....	1
DP6000 Series Brief Description.....	1
Summary.....	3
Application.....	3
Products and Accessories.....	4
Main part of probe.....	4
Accessories.....	5
Specifications.....	7
Machinery specification.....	8
Environment Specifications.....	9
Operating steps.....	9
Test mode(Offset Settings).....	9
Precautions For Use.....	10
Performance Verification.....	11
Installation.....	12
DC accuracy.....	12
Rise time.....	12
DC common mode rejection ratio (CMRR).....	13
Test records form.....	14
Maintenance.....	14
Warranty.....	14
Packing List.....	15

1. Summary

- DP6000 Series High Voltage Differential Probes are designed for the measurement of high voltage differential signal, to meet the demand for floating measurement.
- The probes have a max 100MHz bandwidth and 7000V differential voltage which can meet the majority measurement applications.
- The users can adjust the offset output voltage of the probe for high accuracy.
- The function of 5MHz bandwidth limit can remove the higher frequency noise and interference;
- The probe can provide sound & light alarming function which can also be closed manually
- It can be powered by USB port which is convenient for the customers;
- The output of the probes is a standard BNC port which can be connect to any brand oscilloscope.
- The probes have great CMRR which is very important in many power electronics applications.


2. Application

- ◆ Floating voltage measurement
- ◆ Inverter
- ◆ Switch Power Supply
- ◆ Welding, plating power supply
- ◆ Induction heating, electromagnetic oven
- ◆ Motor driver design
- ◆ Electronic ballast design
- ◆ CRT display design
- ◆ Inverting, UPS power supply
- ◆ Inverter appliance
- ◆ Power conversion and related design
- ◆ Experiment of electrical engineering
- ◆ Low voltage test
- ◆ Power electronics and power transmission experiment, etc

3. Products and Accessories

■ Main part of probe

As DP6150A for example, different voltage, range, bandwidth would be in different products.

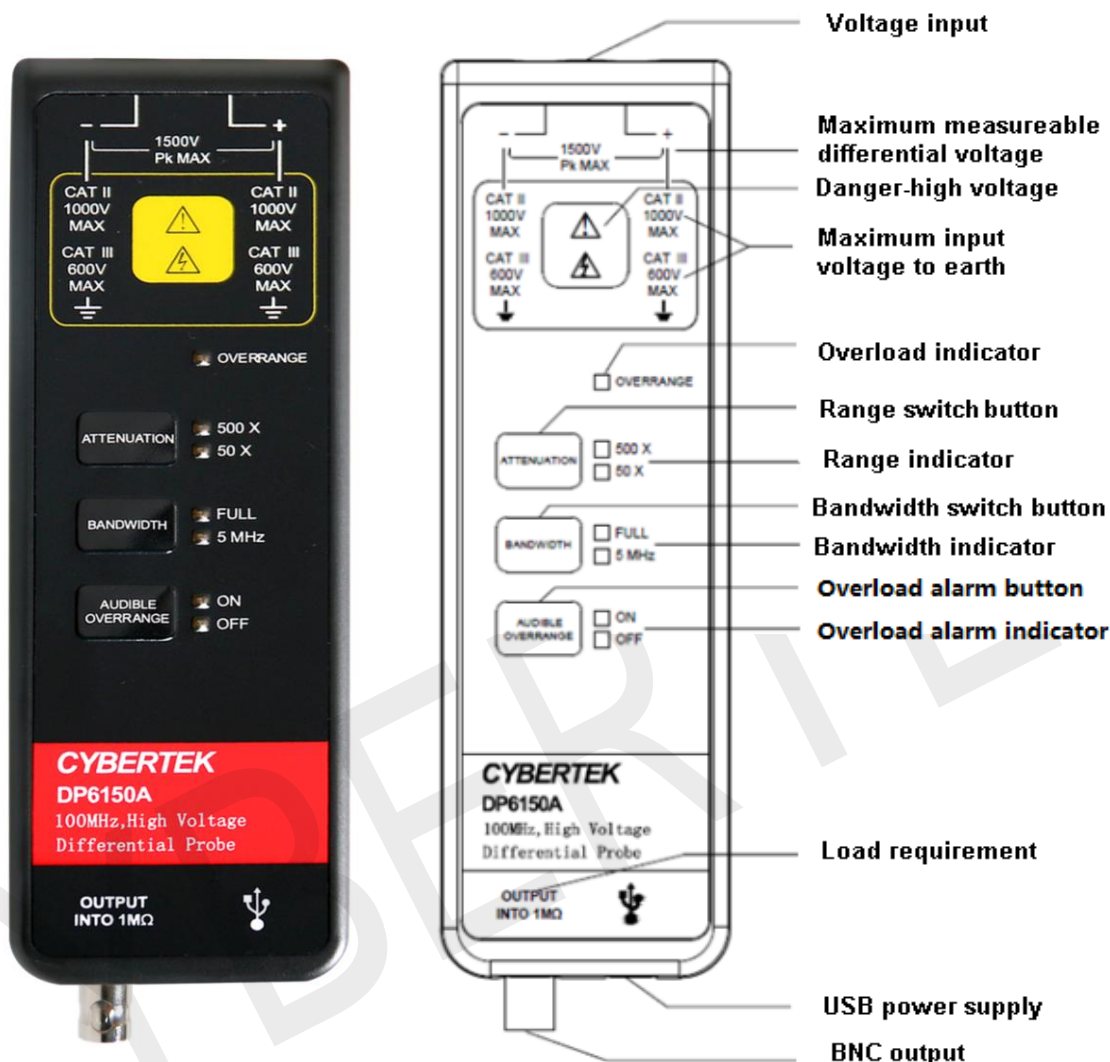

Detailed instructions


- ✧ Integral input leads : The integral input leads extend 24cm from the probe body. Connect the leads directly to your circuit, or use the extender leads and other accessories.
- ✧ ATTENUATION: Different attenuation indicates different ranges, such as DP6150A: 500X, indicate the maximum test voltage is 1500V. 50X presents maximum test voltage is 150V. DP6700A: 1000X shows maximum test voltage is 7000V. 100X indicate maximum test voltage is 700V, oscilloscope attenuation factor should be set accordingly based on the probe attenuation selection .
- ✧ BANDWIDTH: The series products have bandwidth selection function; the default is full bandwidth (FULL) of the product. When testing low frequency signal, you can choose 5MHz bandwidth limit to prevent being interfered by high frequency signal.

- ✧ **AUDIBLE OVERRANGE:** When test range exceeds probe range, audible and visual alarm will start; the function is to control buzzer alarm on or off, ON is to open audible alarm and OFF closes the alarm.
- ✧ **Output connector:** Standard BNC input connectors, can be connected to any manufacturer oscilloscope, oscilloscope input impedance should set to $1M\Omega$; if set to 50Ω , the output attenuation is a half of the practical value.
- ✧ **Power interface:** Standard USB type B interface, supply power with standard USB adapter, can be supplied by oscilloscope, easy to use, also can be supplied by portable power source, convenient for outdoor test.
- ✧ **Factory Setting:** The default factory setting is high attenuation ratio, FULL bandwidth, audible alarm is on. The product has automatic memory, automatically save the state before power off.


■ Accessories Description




Alligator Clips (CK-261 red one pair)

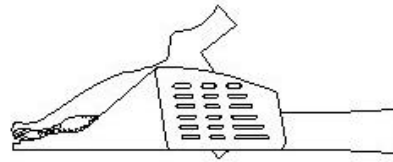


Alligator Clips (CK-262 one pair)

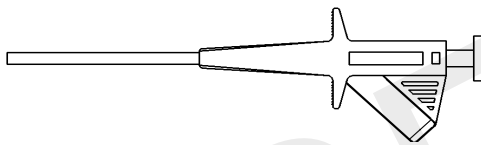


Pincer Clips (CK-281 one pair)

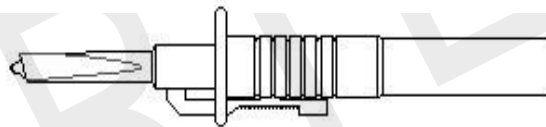


Hook Clips (CK-284 one pair)

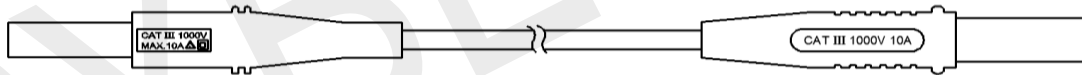


Extender Leads (CK-301 one pair)

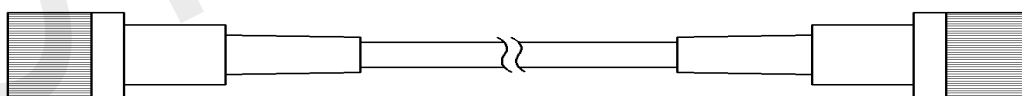

BNC Output Line(CK-310)

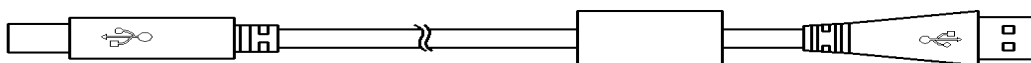

USB line (CK-315 AM-BM, 1.5m)

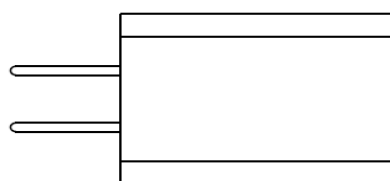

Power adapter (CK-605) USB 5V/1A

Product standard accessories description:

Modal	DP6070	DP6150 (A)	DP6280	DP6700 (A)
Alligator Clips(CK-261)	CATIII 1000V CATIV 600V			--
Alligator Clips(CK-262)	--			CATIII 1000V CATIV 600V
Pincer Clips(CK-281)	CATIII 1000V			
Hook Clips(CK-284)	CATII 1000V			
Extender Leads (CK-301)	CATIII 1000V			
BNC Output Line((CK-310)	Double-ended BNC connector coaxial line 1m			
USB Line (CK-315)	1.5m			
Power Adapter (CK-605)	USB 5V/1A			

NOTE: The above "--" refers to non-standard accessory of this model

4. Electric Specification

Model		DP6070		DP6150 (A)		DP6280		DP6700 (A)	
Bandwidth(-3dB)		70MHz		DP6150	70MHz	100MHz		DP6700	70MHz
				DP6150A	100MHz			DP6700A	100MHz
Rise time		≤5ns		DP6150	≤5ns	≤3.5ns		DP6700	≤5ns
				DP6150A	≤3.5ns			DP6700A	≤3.5ns
Accuracy		±2%		±2%		±2%		±2%	
Range selection(Attenuation rate)		10X/100X		50X/500X		100X/1000X		100X/1000X	
Maximum differential voltage(DC + Peak AC)		10X	±70V	50X	±150V	100X	±280V	100X	±700V
		100X	±700V	500X	±1500V	1000X	±2800V	1000X	±7000V
Common mode voltage(DC + Peak AC)		±700V		±1500V		±2800V		±7000V	
Maximum differential mode VS frequency curve		Reference Figure 1		Figure 2		Figure 3		Figure 4	
Maximum input voltage-to-earth (Vrms)		450V CATII 600V CATI		600V CATIII 1000V CATII		600V CATIII 1000V CATII		1000V CATIII 2300V CATI	
Input impedance	Single-ended to ground	2.5MΩ		5MΩ		5MΩ		20MΩ	
	Between inputs	5MΩ		10MΩ		10MΩ		40MΩ	
Input capacitance	Single-ended to ground	<4pF		<4pF		<4pF		<5pF	
	Between inputs	<2pF		<2pF		<2pF		<2.5pF	
CMRR	DC	>80dB		>80dB		>80dB		>80dB	
	100kHz	>60dB		>60dB		>60dB		>60dB	
	1MHz	>50dB		>50dB		>50dB		>50dB	
Noise(Vrms)		10X	<20mV	50X	<50mV	100X	<100mV	100X	<200mV
		100X	<120mV	500X	<300mV	1000X	<600mV	1000X	<1.2V
Differential overvoltage detection level		10X	≥70V	50X	≥150V	100X	≥280V	100X	≥700V
		100X	≥700V	500X	≥1500V	1000X	≥2800V	1000X	≥7000V
Propagation time	Probe	About 12ns							
	BNC	About 5ns							
	Line(1m)								
Bandwidth limit filters (5MHZ)		≥-3dB@5MHz							
Overload indicator (red light)		Yes							
Overload alarm		Yes(Can shut up manually)							
Automatic save		Yes							
Offset setting function		Yes (Set in test mode)							
Terminate load		≥100kΩ							
Power supply		USB 5V/1A adapter							
Safety standard		EN61010-1: 2010							
EMC standard		EN61326-1:2013 EN61000-3-2:2006+A1:2009+A2:2009 EN61000-3-3:2013							

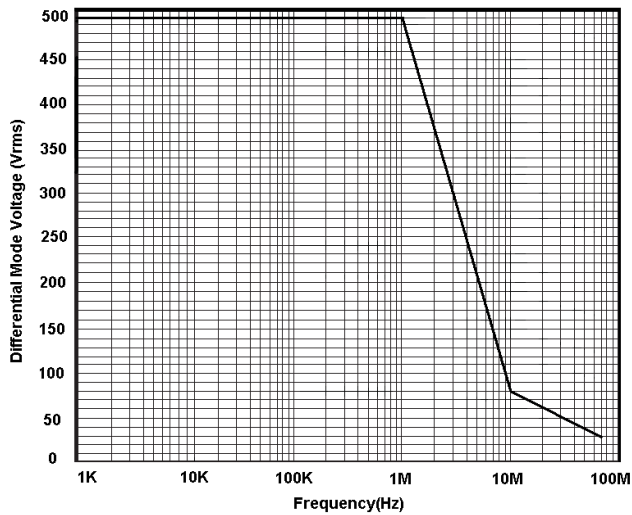


Figure 1: DP6070 Differential Mode Voltage VS Frequency

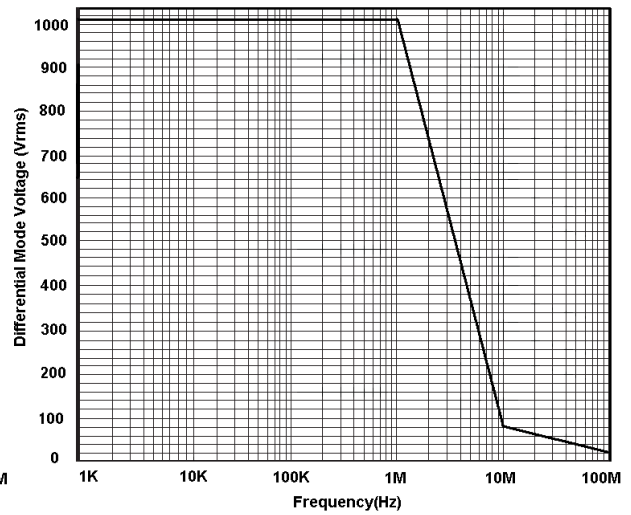


Figure 2: DP6150(A) Differential Mode Voltage VS Frequency

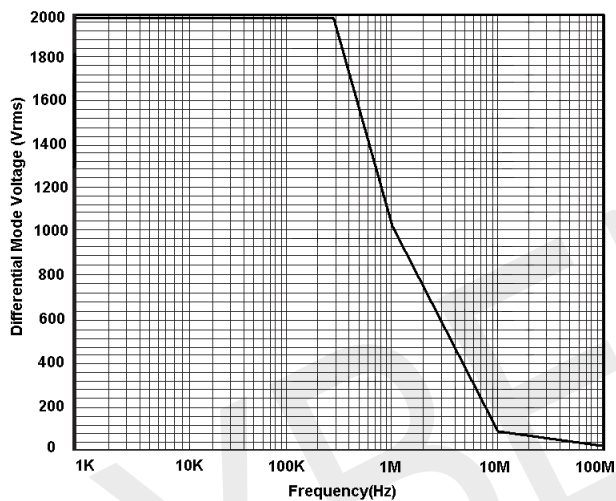


Figure 3: DP6280 Differential Mode Voltage VS Frequency

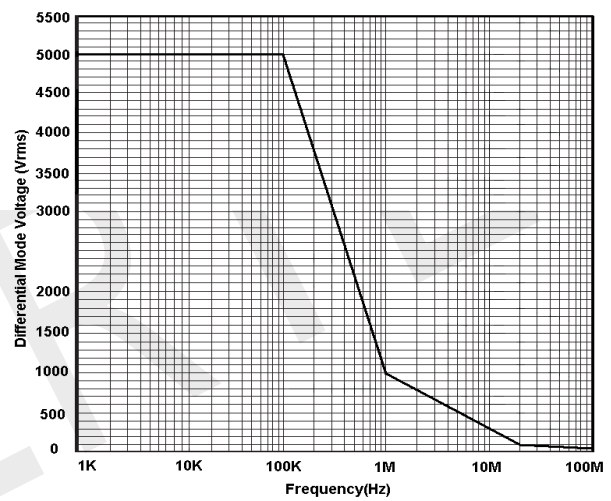


Figure 4: DP7000(A) Differential Mode Voltage VS Frequency

5. Mechanical Specification

Model		Parameters
Input leads		Approx 24cm
Extender leads(CK-301)		Approx 1m
BNC Output Line(CK-310)		Approx 1m
Alligator clips CK-261		Approx 85*40*17mm
Alligator clips CK-262		Approx 106*43*16mm
Pincer clips CK-281		Approx 152*50*13mm
Hook clips CK-284		Approx 121*23*23mm
Probe dimensions		Approx 195*65*28mm
Probe weight	DP6070	Approx 216g
	DP6150 (A)	Approx 216g
	DP6280	Approx 216g
	DP6700 (A)	Approx 228g

6. Environmental Characteristics









Model	Parameters
Operating temperature	0°C ~ 50°C
Storage temperature	-30°C ~ 70°C
Operating humidity	≤85%RH
Storage humidity	≤90%RH
Operating altitude	3000m
Storage altitude	12000m

7. Operating steps

- ✧ You should estimate the tested voltage amplitude before testing, please do not use if exceeds the voltage range, because probably the probe will be damaged.
- ✧ Connect the input lead and output lead to the probe; and then connect the probe to oscilloscope or other instruments.
- ✧ Connect the power adapter to voltage probe, the power indicator light turns on green. Please select proper range based on the tested voltage; when the tested voltage exceeds range, the overload indicator light is on with alarming sound, which can be manually turned off.
- ✧ Please set proper attenuation rate for the oscilloscope or other instruments according to the probe range; and adjust the oscilloscope sensitivity based on the tested voltage.
- ✧ Connect the probe clips based on needs, start after connecting to the circuits to be tested. When testing, the probe body should keep away from high voltage pulse circuits to reduce interference to the probe.
- ✧ Turn off the probe power after the testing is completed, first disconnect the two inputs from the tested points, and then unplug the BNC plug from the oscilloscope.

8. Test Mode (Offset Setting)

User may enter the test mode to adjust offset if the output zero drift . The adjustment method is as follows:


- ✧ Make the input terminals short circuits, and then press these both keys   ,.
- ✧ Turn power on to start, you will be in test mode while the overload indicator light is on, then release the two keys.
- ✧ The high attenuation factor offset adjustments (corresponding indicator light): press the key  for offset increasing; press  for offset decreasing.
- ✧ After the adjustment, press key  to switch to low attenuation ratio offset adjustment (corresponding indicator light), press key  for offset increasing, press  for offset decreasing.
- ✧ After the above step, press key  to exit the test mode, offset adjustment is completed and the overload indicator light off, entering into normal operation mode.

9. Safety Notices:


Note

- ✧ Please try to wind the input leads when testing, which is better for eliminating noise, to improve the ability of high frequency response.


Please view below for the winding method:

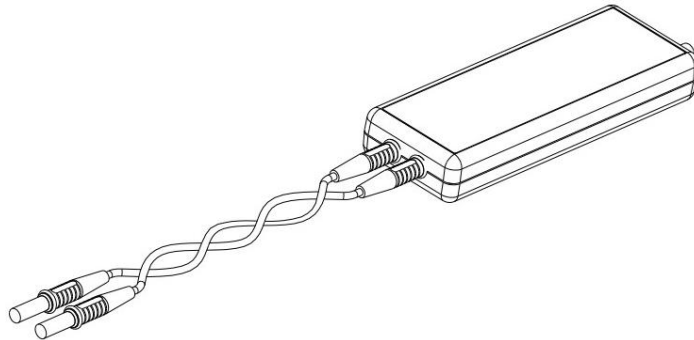

- ✧ It is better not to extend input lead when testing; otherwise it may introduce more noise. If extra extension lead is necessary, please ensure the extension leads are at same length, and the input frequency is under 5MHz, errors may exist if exceeds 5MHz output.

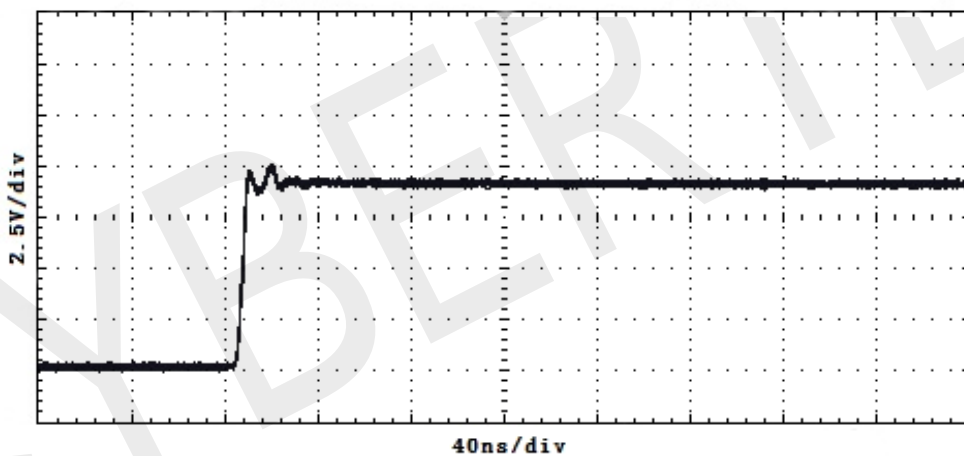

Without extender leads

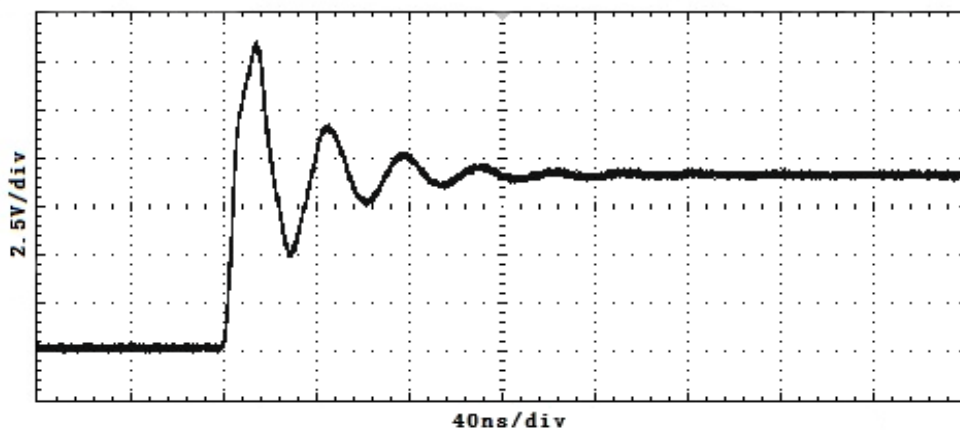

With extender leads

10. Performance Verification

The below operation is for performance verification of the electric specification, requirement for test equipment is shown below:

Equipment	Minimum Requirements	Usages
Oscilloscope	Bandwidth \geq 100MHZ;Accuracy \leq 1.5%, e.g. Tektronix MSO/DSO4000	Displays probe output
Standard signal generator; calibrator	Amplitude accuracy \leq 0.75%;rise time \leq 3ns e.g.: FLUKE/WAVETEK 9100	Test bandwidth; AC accuracy; common mode rejection ration
Digital multimeter	Accuracy of not less than 6 and a half e.g.: KEITHLEY 2000	Test the DC accuracy
Insulation pincer clips	Supplied in the accessories	Testing clips
BNC adapter 1	BNC-male-to-female-dual show as Figure 1	Test adapter
BNC adapter 2	BNC-male-to-dual binding post show as Figure 2	Test adapter
BNC adapter 3	BNC-female-to-dual binding post show as Figure 3	Test adapter
Load terminal	BNC-male-to 50 Ω load show as Figure 4	Signal source load

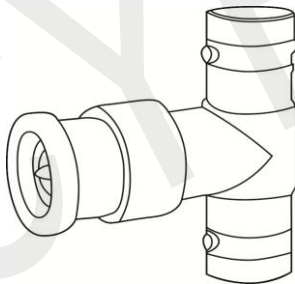


Figure 1 BNC-male-to-female-dual

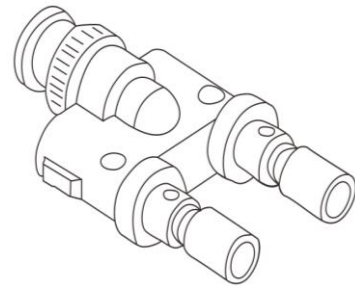


Figure 2 BNC-female-to-dual binding post

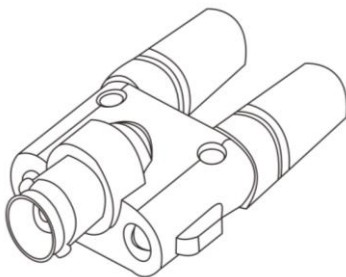


Figure 3 BNC-male-to-dual binding post

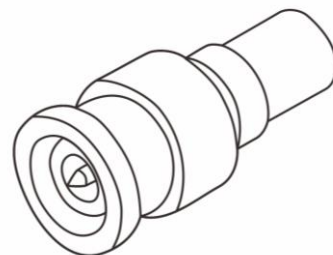


Figure 4 BNC-male-to 50 Ω load

10.1 Setup

- ✧ Connect power adapter to voltage probe, which turns on green light, to ensure accuracy, test the probe index after 20 minutes.
- ✧ Uncover the red black plastic cover of the BNC-male-to-dual binding post.

10.2 DC Accuracy

- ✧ Connect the probe output to the BNC-female-to-dual binding post; plug the two input terminals of the digital multimeter into the binding post hole.
- ✧ Connect the probe input to insulation pincer clips, and then connect the calibrator output and the generator close, connect the red clip to the positive pole, black clip to negative pole.
- ✧ Set the probe attenuation factor in the first gear.
- ✧ Follow the chart below to set output values for the signal source.
- ✧ Enable the signal output, observe and record the output voltage for the attenuation.
- ✧ Close the signal source output.
- ✧ Switch the probe attenuation factor to the second gear.
- ✧ Repeat step 4~6, and calculate whether is within the accuracy ranges.

Model	Attenuation Rate	Signal source output voltage	Probe expected output voltage	Probe practical output voltage
DP6070	10X	1V	100mV \pm 2mV	
	100X	10V	100mV \pm 2mV	
DP6150(A)	50X	5V	100mV \pm 2mV	
	500X	50V	100mV \pm 2mV	
DP6280	100X	10V	100mV \pm 2mV	
	1000X	100V	100mV \pm 2mV	
DP6700(A)	100X	10V	100mV \pm 2mV	
	1000X	100V	100mV \pm 2mV	

10.3 Rise Time

- ✧ Configure the fast rise output of the generator for a 50 Ω load. Attach a 50 Ω terminator to the generator fast-rise output and attach the modified BNC adapter to the terminator. Attach the differential probe input leads (without attachment accessories) by sliding the banana plug of the leads onto the binding posts metal sleeves on the modified BNC adapter.
- ✧ Connect the probe output to the oscilloscope, set attenuation factor in the first gear.
- ✧ Refer to the below stable to set standard signal generator.
- ✧ Enable signal source output and record the rise time.
- ✧ Close signal source output.
- ✧ Switch the probe attenuation factor to the second gear.
- ✧ Repeat step 3~5, and calculate whether is in the range.

Model	Attenuation Rate	Signal source voltage, frequency setting	Expected probe rise time	Rising time
DP6070	10X	20V _{p-p} 70MHz	≤5ns	
	100X	20V _{p-p} 70MHz	≤5ns	
DP6150	50X	20V _{p-p} 70MHz	≤5ns	
	500X	20V _{p-p} 70MHz	≤5ns	
DP6150A	50X	20V _{p-p} 100MHz	≤3.5ns	
	500X	20V _{p-p} 100MHz	≤3.5ns	
DP6280	100X	20V _{p-p} 100MHz	≤3.5ns	
	1000X	20V _{p-p} 100MHz	≤3.5ns	
DP6700	100X	20V _{p-p} 70MHz	≤5ns	
	1000X	20V _{p-p} 70MHz	≤5ns	
DP6700A	100X	20V _{p-p} 100MHz	≤3.5ns	
	1000X	20V _{p-p} 100MHz	≤3.5ns	

10.4 DC Common Mode Rejection Ration(CMRR)

- ✧ Set DP6XXX series probes at low attenuation ration, respectively (10X, 50X, 100X).
- ✧ Set 500V DC voltage for signal source, now the voltage output shut up.
- ✧ Connect the two probe inputs to 500V voltage.
- ✧ Connects the probe output to BNC-female- to- dual binding post (as shown in Figure 3), and plug into the two inputs of the digital multimeter.
- ✧ Enable signal source output, respectively record voltage output values; check with the following chart to calculate whether is within the ranges.
- ✧ Close the calibrator after completion of the test.

Model	Attenuation Rate	Probe expected output voltage	Probe practical output voltage
DP6070	10X	≤1mV	
DP6150 (A)	50X	≤1mV	
DP6280	100X	≤1mV	
DP6700 (A)	100X	≤1mV	

Note: High voltage 500 V is used during the testing, please pay attention to personal safety; to reduce voltage fluctuation, be sure to make the calibrator output 500 V high voltages after the completion of all connections.

10.5 Testing Record Form

Testing Record Form					
Product Serial NO:			Test temperature:		
Testing Date:			Test Humidity:		
Test model:			Lower limit	Test result	Upper limit
DC Accuracy	DP6070	10X	98mV		102mV
		100X	98mV		102mV
	DP6150 (A)	50X	98mV		102mV
		500X	98mV		102mV
	DP6280	100X	98mV		102mV
		1000X	98mV		102mV
	DP6700 (A)	100X	98mV		102mV
		1000X	98mV		102mV
Rise Time	DP6070	10X	--		7ns
		100X	--		7ns
	DP6150	50X	--		7ns
		500X	--		7ns
	DP6150A	50X	--		3.5ns
		500X	--		3.5ns
	DP6280	100X	--		3.5ns
		1000X	--		3.5ns
	DP6700	100X	--		7ns
		1000X	--		7ns
	DP6700A	100X	--		3.5ns
		1000X	--		3.5ns
Dc Common Mode Rejection Ratio	DP6070	10X	--		1mV
	DP6150 (A)	50X	--		1mV
	DP6280	100X	--		1mV
	DP6700 (A)	100X	--		1mV

11. Care and Maintenance

- ✧ Keep the probe clean and dry.
- ✧ Please wipe with soft dry cloth when clean needed, must not use chemicals to clean.
- ✧ Please put the probe in the package provided, and put it in cool, clean and dry places.
- ✧ Please put the probe in the package provided to prevent shock.
- ✧ Do not forcefully pull the input and output lead to prevent bending, twisted and folding.
- ✧

12. Warranty

Please refer to the warranty instruction.

13. Packaging

Package				
Items	DP6070	DP6150 (A)	DP6280	DP6700 (A)
Voltage probe body	1 unit	1 unit	1 unit	1 unit
USB 5V/1A Adapter(CK-605)	1 unit	1 unit	1 unit	1 unit
Alligator clips (CK-261)	1 pair	1 pair	1 pair	--
Alligator clips (CK-262)	--	--	--	1 pair
Insulation pincer clips (CK-281)	1 pair	1 pair	1 pair	1 pair
Hook clips (CK-284)	1 pair	1 pair	1 pair	1 pair
Extension cord (CK-301)	1 pair	1 pair	1 pair	1 pair
Output lead(CK-310)	1 pcs	1 pcs	1 pcs	1 pcs
USB connecting line (AM-BM, 1.5m)	1 pcs	1 pcs	1 pcs	1 pcs
Advanced tool cabinet	1 unit	1 unit	1 unit	1 unit
User manual	1 book	1 book	1 book	1 book
Warranty card	1 unit	1 unit	1 unit	1 unit
Testing report	1 pcs	1 pcs	1 pcs	1 pcs

NOTE: The above "--" refers to non-standard accessory of this model

CYBERTEK

SHENZHEN ZHIYONG ELECTRONICS CO.,LTD.

Addr: Room A1702, Building 4, TianAn Cyber Park, HuangGe North Road, LongGang

District, ShenZhen City, China

Tel: +86-400 852 0005

+86-755-86628000

Q Q: 400 852 0005

Fax: +86-755-86620008

Email: cybertek@cybertek.cn

Url: <http://www.cybertek.cn>

© Zhiyong Electronics, 2016

Published in China, May 16, 2016